


IMPORTANT! PLEASE, READ CAREFULLY THESE INSTRUCTIONS AND KEEP THEM IN A SAFE PLACE FOR FUTURE REFERENCE! THE CHILD MAY GET INJURED IF YOU FAIL TO FOLLOW THE WARNINGS AND GUIDELINES IN THIS MANUAL

USER MANUAL FOR BABY WALKER RACER 4 IN 1

RACER

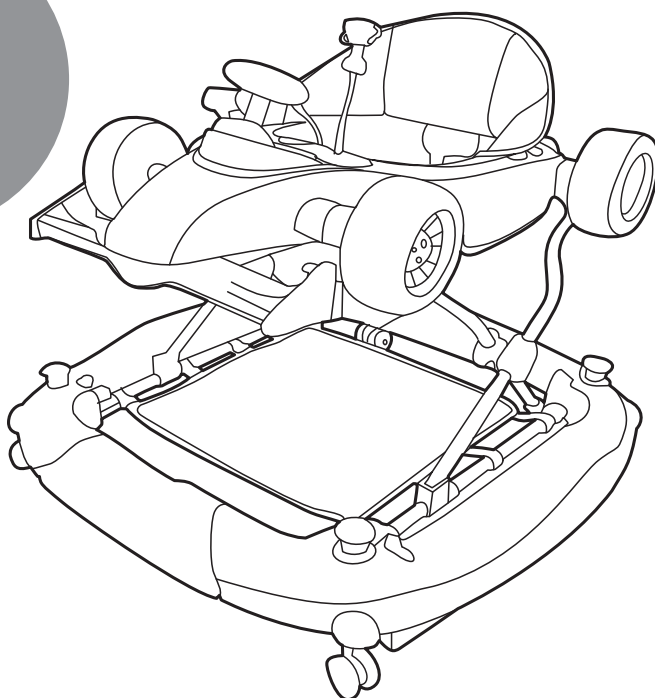

This baby walker is manufactured in accordance with the Product Safety Directive 2001/95/EU of the European Parliament and the Council, to European standard EN 1273 Child use and care articles. Baby walking frames. Safety requirements and test methods as well as Consumer Protection Law from national legislation.

TO SECURE THE SAFE USE OF THIS PRODUCT AND PREVENT BABY FROM INJURIES, FOLLOW THE WARNINGS, GUIDELINES AND RECOMMENDATIONS IN THIS MANUAL!

- ❖ CAUTION! NEVER LEAVE THE CHILD IN BABY WALKER WITHOUT SUPERVISION!
- ❖ CAUTION! BABY WALKER IS NOT FOR CHILDREN, WHO CAN WALK ALONE!
- ❖ CAUTION! BABY WALKER IS NOT FOR CHILDREN WEIGHING MORE THAN 12 kg!
- ❖ CAUTION! BABY WALKER IS NOT FOR CHILDREN, WHO CANNOT SIT IN IT UNAIDED!
- ❖ CAUTION! THE CHILD IN BABY WALKER CAN REACH MORE OBJECTS, MOVE FASTER AND AT BIGGER DISTANCES. TO PROTECT THE CHILD FROM INJURY:
- ❖ DO NOT ALLOW ACCESS TO STAIRS, STAIRCASES, UNEVEN SURFACES!
- ❖ KEEP AWAY FROM FIRE, SOURCES OF HEAT, COOKING APPLIANCES!
- ❖ KEEP AWAY FROM CHILDREN HOT LIQUIDS, ELECTRIC CORDS AND OTHER DANGEROUS OBJECTS!
- ❖ AVOID IMPACTS WITH DOOR GLASSES, WINDOWS AND FURNITURE!
- ❖ CAUTION! THE SET IN THIS PACKAGE CONTAINS SMALL PARTS! DO NOT ALLOW CHILDREN AGED LESS THAN 3 YEARS NEAR THE PRODUCT DURING ITS ASSEMBLY!
- ❖ Do not use the baby walker if you find broken, wobbly or missing parts.
- ❖ Adult assembly of the walker and its accessories is required!
- ❖ Height of the seat must be according to child's needs.
- ❖ You should use this baby walker only for short periods. Recommended duration is 20 minutes!
- ❖ When the child is in the walker, its feet must touch the floor.
- ❖ Before usage the walker must be completely unfolded and all parts must be fixed. Make sure that all locking mechanisms are engaged!
- ❖ Use the walker only at home, on even (not sloped) surface and only for its purpose!
- ❖ Do not lift and do not move the walker while the child is in it!
- ❖ Stick or remove any loose stickers to avoid them being swallowed by small children!
- ❖ Do not use spare parts or components different from the ones supplied by the producer! The producer is not liable in case you use parts other than the original or approved by him.
- ❖ Do not make changes or modifications to the frame! If necessary, contact the retailer or an authorized service for advice and repair.
- ❖ Keep the nylon package away from children to avoid the risk of suffocation!



IMPORTANT! WARNINGS AND GUIDELINES FOR BATTERY USE

- After inserting batteries, always secure the battery compartment with the cover.
- Do not allow children to access or play with the batteries!
- Use only batteries of the designated type and power.
- Do not use batteries of different types.
- Do not short circuit the contact surfaces!
- Follow the designated polarity in the battery compartment.
- Remove damaged or depleted batteries.
- Remove the batteries when the product will not be used for long time.
- Do not throw the batteries in open fire. Do not take the batteries to pieces.
- **CAUTION!** Waste from depleted or unusable batteries must be disposed of separately. It is forbidden to throw them out in containers for household waste. Dispose of the batteries only at the specified places.




MAIN FEATURES. FUNCTIONS

Baby walker RACER 4 in 1 encourages baby's attempts to make his first steps and improves his balance and coordination. Bright colors and sounds of the tray with toys and musical panel stimulate the creativity of the child and develop his hearing and vision skills.

- This baby walker is suitable for children who weigh up to 12 kg, who are not able to walk by themselves, but who are able to sit by themselves.
- Top tray may be height adjusted at 3 levels;
- Anti-slip stoppers that prevent falling off stairs or tip over;
- 4 pcs wheels (front wheels swivel at 360°);
- Necessary batteries: 2 pcs type AAA/1,5V. Batteries are not included and are sold separately.
- Rocking function;
- Textile base ;
- Transforms into push car.

MAIN PARTS

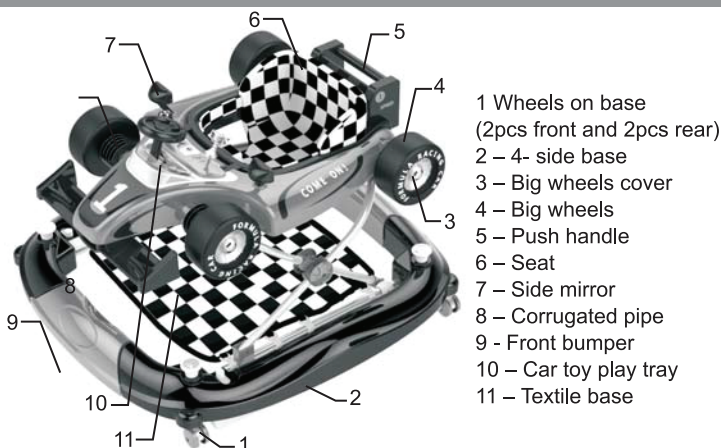

ASSEMBLY INSTRUCTIONS

CAUTION! Follow exactly the guidelines and the sequence of assembly and use which you will find in the figures in the manual.

CAUTION! AFTER EACH STEP, MAKE SURE THAT THE FIXING IS STABLE!

CAUTION! KEEP YOUR FINGERS FROM ENTRAPMENT WHEN OPERATING THE WALKER, ESPECIALLY DURING ITS UNFOLDING AND FOLDING!

The product is delivered partially assembled. In order to complete the assembly you will need a screwdriver for some operations. The screwdriver is not included in this set.

The assembly steps are numbered from 1 to 12. Use the descriptions below along with the figure of the same number.

ASSEMBLY

1 Installing the small front and rear wheels to the base

1-1 Installing the front wheels

1-2 Installing the rear wheels

1-3 **IMPORTANT!** Never use the walker without its wheels and stoppers!

2 – Dressing the upholstery

- Insert 3 buckles form the front part of the upholstery in the openings on the top tray.
- Insert the rest 7 buckle sin the openings on the top tray.

CAUTION! Make sure that the buckles are fixed and connect the upholstery with the top tray securely.

3 – – Installing the batteries and car play tray

CAUTION! After you put the batteries, make sure you have secured the battery compartment by screwing the cover!

– Installing the side mirror

5 – Installing the big wheels

6 – Putting the covers on big wheels

7 – Installing the front bumper

8 – Folding the stroller

FUNCTIONS






9 – Adjuting tray height.








10 – Using the walker as push car with 4-side base. Adjusting the push handle.

11 – Rocking function








Important: When you use the rocking function, you must install the textile base.

12 – Transforming in push car

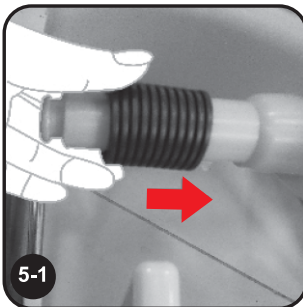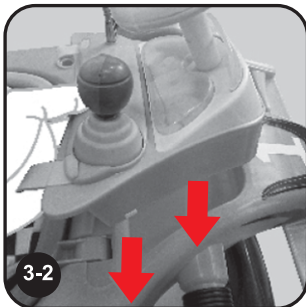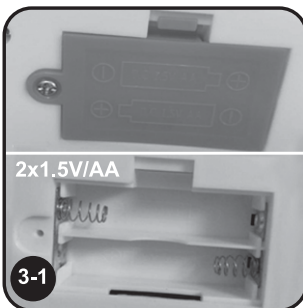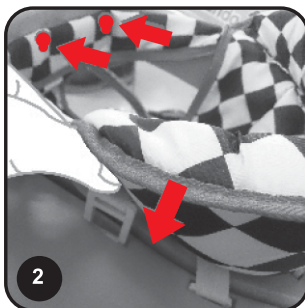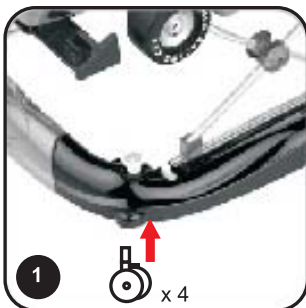

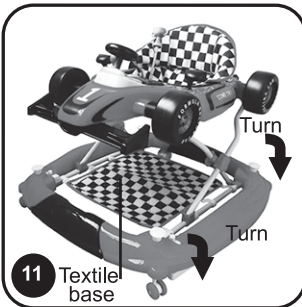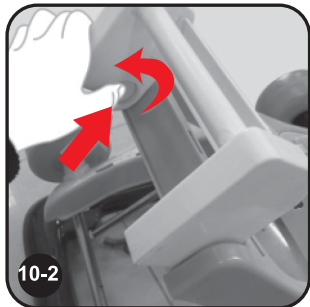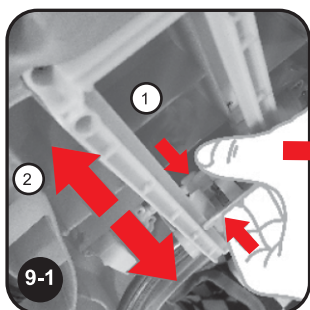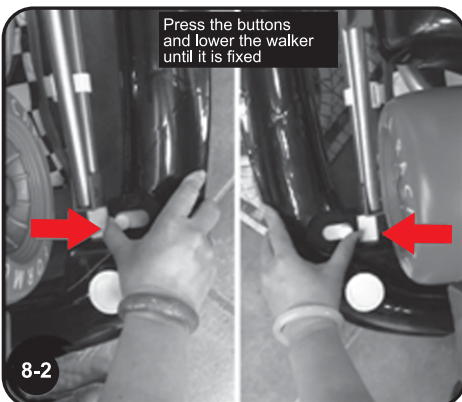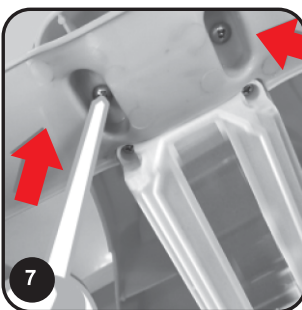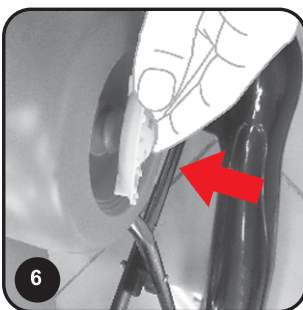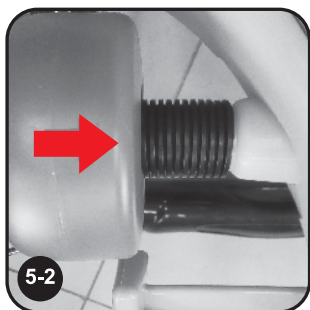

Textile base

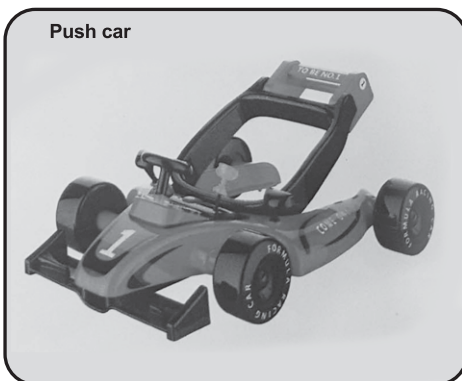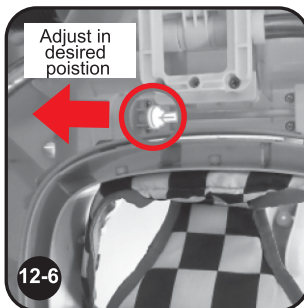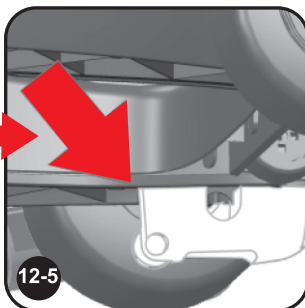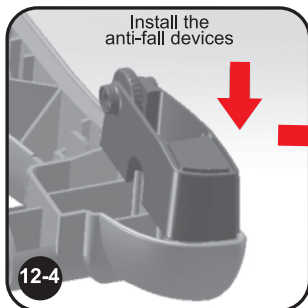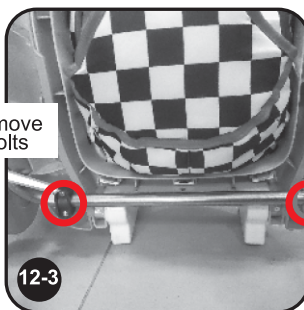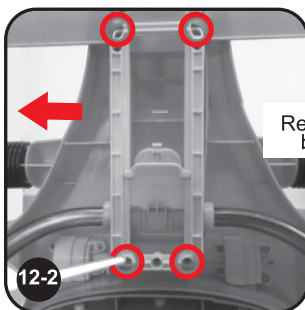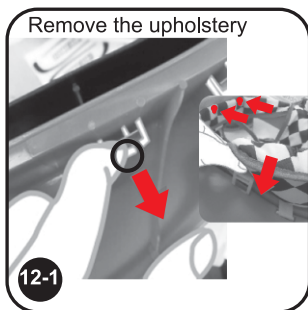

CARE AND MAINTENANCE ISNTRUCTIONS

- Do not pour water on the product. Clean the using a damp soft towel or sponge and a mild soap.
- Do not use aggressive detergents, containing abrasive particles, ammonia, bleach or spirits.
- Fabric part may be hand washed at 30°C.
- Always let the tproduct dry out fully before storing or using it, in order to avoid mould and rust.
- Discontinue using the product if you find any damage.
- Do not store in hot environment or near strong heat sources in order to avoid deforming.
- Store in clean and dry place. Do not expose the product to direct sunshine, rain, moist or harsh temperature changes!
- Do not put heavy objects on top of the product druing its storage or transporting as this may damage it.
- Contact your authorized dealer if consultation or repair is needed.

Used materials: 100% polyester (fabric part and filling), plastic, metal.



PRRC0210xxx/37231C



1 Goliamokonarsko shosse, Plovdiv, BULGARIA
www.chipolino.com